


EPSON *Print!* for LocalTalk™

User's Guide

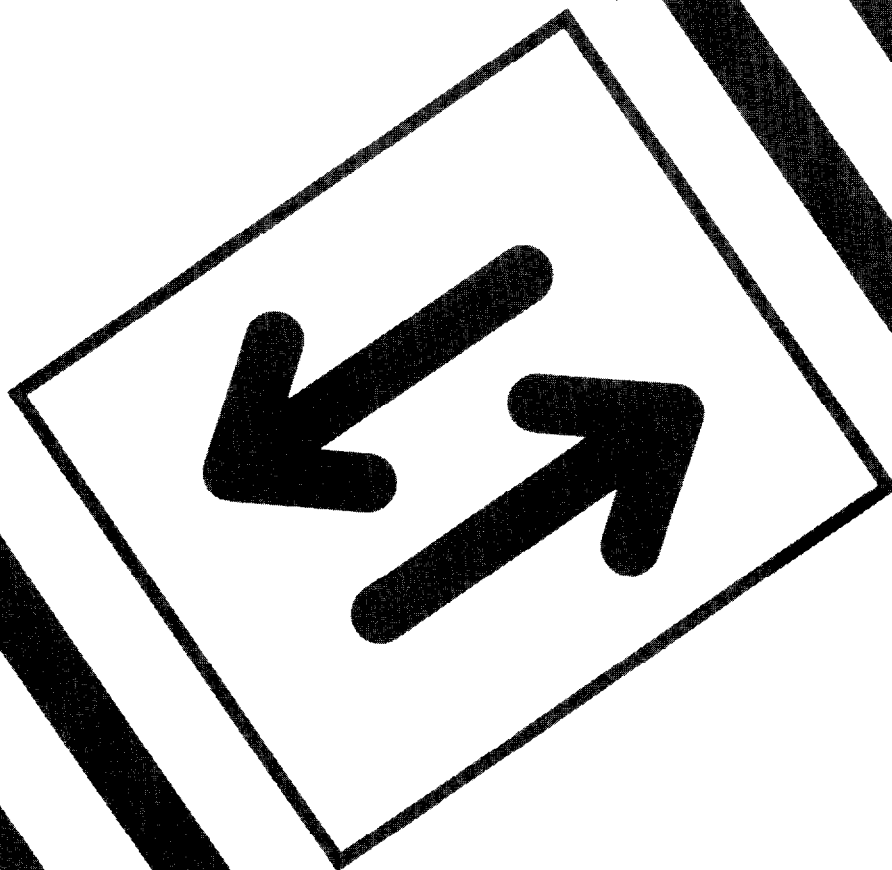

TED WARRANTY

Epson Corp.'s Licensor(s) makes no warranties, express or implied, including without limitation implied warranties of merchantability and fitness for a particular purpose, regarding the software. Epson Corp.'s Licensor(s) does not warrant, guarantee or make any representations regarding the results of the use of the software in terms of its correctness, accuracy, reliability, currentness or rise. The entire risk as to the results and performance of the software is assumed by you. The inclusion of implied warranties is not permitted by some states. The above exclusion may not apply to

vent will Seiko Epson Corp.'s Licensor(s), and their directors, officers, employees or agents (collectively Seiko Epson Corp.'s Licensor) be liable to you for any consequential, incidental or indirect damages (including damages for loss of business profits, business interruption, loss of business information, and the like) arising out of the use or inability to use the software even if Seiko Epson Corp.'s Licensor has been advised of the possibility of such damages. because some states do not allow exclusion or limitation of liability for consequential or incidental damages, the above limitations may not apply to you.

Epson Corp./s Licensor's liability to you for actual damages from any cause whatsoever, and regardless of the form of the action (whether in contract, tort (including negligence), product liability or otherwise), will be limited to \$50.

EPSON Print! for LocalTalk™

User's Guide



This manual is printed on recycled paper and is 100% recyclable.

n America, Inc.

Rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, mechanical, photocopying, recording, or otherwise, without prior written permission of the Seiko Epson Corporation. No patent liability is assumed with respect to the use of the information contained herein. While every precaution has been taken in the preparation of this book, Seiko Epson Corporation assumes no responsibility for errors or omissions. Neither is any liability assumed for damages resulting from the use of the information contained herein.

Epson and Epson SC/1 are registered trademarks and Epson ESC/P 2 is a trademark of Seiko Epson Corporation.

Disclaimer: Other product names used herein are for identification purposes only and may be trademarks of their respective companies.

Contents

About this guide	vii
Conventions used in this guide	viii
Where to get help	viii

Chapter 1 Introduction

What is EPSON Print!?.	2
What does your EPSON <i>Print!</i> package contain?	3
Do you have what you need?	3
Supported printers	4
Macintosh computer models	4
System configuration	5
LocalTalk interface and printer cable requirements	5

Chapter 2 Installing the Interface Card for LocalTalk

What is AppleTalk?	8
Preparing to install the interface card	8
Installing the interface card	9

Chapter 3 Installing EPSON Print!

Installing EPSON <i>Print!</i> with System 7.x	12
Copying the EPSONPrint! driver to your hard disk	12
Copying the EpsonNamer to your hard disk	13
Installing EPSON Print! with System 6.x	14
Installing the Communications Toolbox	14
Copying EpsonTool to the Communications folder	15
Copying EPSON <i>Print!</i> to your System folder	15
Copying the EpsonNamer to your hard disk	16
Assigning and selecting a LocalTalk printer	17
Activating AppleTalk	17
Using the EpsonNamer to name your printer	18
Selecting a LocalTalk printer with the Chooser	21

Chapter 4 Using EPSON Print!

Selecting page layouts	26
Using the paper option	27
Paper sizes	27
Using the reduce or enlarge option	28
Choosing orientation	28
Assigning printer effects	28
Font substitution	28
No gaps between pages	29
Selecting options	29
Using custom paper sizes	30
Creating custom paper sizes.	30
Deleting custom paper sizes	31
Printing with EPSON <i>Print!</i>	31
Selecting the print mode	32
Using the Draft print mode effectively	33
Selecting the head scan direction	35
Choosing the number of copies	35
Selecting pages to print	35
Using the cover page option	36
Selecting paper bins	36
Paper feed	37
Paper bin options	38

Chapter 5 Troubleshooting

EPSON <i>Print!</i> driver problems	40
AppleTalk network problems	42
Insufficient memory problems	43
Application program problems	44

Appendix A LocalTalk port specifications 45

Appendix B Interface Card for LocalTalk self test 47

Removing the interface card from the printer	48
Changing the self-test jumper setting	48
Installing the interface card for the self test	50
Printing a self test	51
Returning the jumper to its original position	51

Glossary	53
Index	57

Figures

Chapter 2 Installing the Interface Card for LocalTalk

Figure 2-1 Inserting the interface card	10
---	----

Chapter 3 Installing EPSON Print!

Figure 3-1 Activating AppleTalk	18
Figure 3-2 Initial EpsonNamer dialog box	19
Figure 3-3 EpsonNamer name assignment box	20
Figure 3-4 New name example	20
Figure 3-5 Renamed Epson printer	21
Figure 3-6 Selecting the EPSON Print! driver from the Chooser	22
Figure 3-7 LQ-570printer selected with the Chooser	22

Chapter 4 Using EPSON Print!

Figure 4-1 Epson ESC/P2 Net page setup dialog box	26
Figure 4-2 Options dialog box	29
Figure 4-3 EPSON <i>Print!</i> dialog box	32
Figure 4-4 Bins option dialog box	37

Appendix B Interface Card for LocalTalk self test

Figure B-1 Identifying the self-test jumper	49
Figure B-2 Setting the jumpers ON or OFF	50

About this guide

This guide describes how to install and use your EPSON Print! drivers to print documents created with your single user or networked Macintosh® computer connected to your Epson printer through LocalTalk®.

This guide is organized into the following chapters:


 


- ❑ Chapter 1 describes the features of EPSON *Print!*, identifies the package contents, and tells you what you need before you install EPSON *Print!*
- ❑ Chapter 2 describes how to install your Interface Card for LocalTalk in your Epson printer
- ❑ Chapter 3 lists the steps for installing EPSON *Print!* on your Macintosh computer
- ❑ Chapter 4 describes how to use EPSON *Print!* to set up your page layout and print documents on your Epson printer
- ❑ Chapter 5 helps you troubleshoot problems that may occur while you are using EPSON *Print!*
- ❑ Appendix A contains the LocalTalk port specifications for your Interface Card for LocalTalk
- ❑ Appendix B describes how to perform a self test for the Interface Card for LocalTalk.

The glossary gives definitions of terms used in this guide. Most terms that appear in the glossary are **in bold** the first time they occur in the text.

You can also use the index at the end of this guide to locate information quickly.

Conventions used in this guide

The terms used in this guide for making selections in dialog boxes are shown here next to their corresponding symbols:

Button	<u>[Options]</u>	<u>[Paper]</u>
Radio button	On 	Off 
Check box	On 	Off 

For other definitions, see the glossary.

Where to get help

Epson America provides local customer support and service through a nationwide network of authorized Epson dealers and Service Centers.

Epson also provides the following support services through the Epson Consumer Support Center at (800) 922-8911:

- ❑ Assistance in locating your nearest Authorized Epson Reseller or Service Center
- ❑ Technical assistance with the installation, configuration, and operation of Epson products
- ❑ Epson technical information library fax service-also available by calling the toll number (310) 782-4214 directly
- ❑ Product literature with technical specifications **on** current and new products

- ❑ Sales of ribbons, supplies, parts, documentation, and accessories for your Epson product
- ❑ Customer Relations
- ❑ User group locations.

Chapter 1

Introduction

Contents

What is EPSON Print!?.	2
What does your EPSON <i>Print!</i> package contain?	3
Doyouhavewhatyouneed?	3
Supported printers	4
Macintosh computer models.	4
System configuration	5
LocalTalk interface and printer cable requirements	5

What is EPSON Print ?

EPSON **Print!** is a set of **printer drivers** that allow you to use your Epson printer with Macintosh computers on a LocalTalk network or as a single user with a LocalTalk connection.

EPSON Print! provides you with the following features:

- ❑ Support of the **LocalTalk** interface for Epson **ESC/P 2** dot-matrix printers so you can communicate with your Epson printer through a LocalTalk connection.
- ❑ The ability to print your text and graphics just as you would on an Apple ImageWriter®.
- ❑ A graphics print mode that converts the entire document to your choice of resolutions. The highest resolution gives you the best-quality documents possible.
- ❑ A fast draft mode for dot-matrix printers that prints out the text part of your documents only, using the printer's internal fonts. You can then see the approximate document layout without waiting for slower graphics processing.
- ❑ On-line help using the Help button on System 6.x or balloon help on System 7.x. The balloon help allows you to see help messages each time you point the mouse at a potential setting. See your System 7 manual for more information about balloon help.

What does your EPSON Print! package contain?

In addition to this manual, your EPSON Print! package should include the following:

- ❑ **Interface Card for LocalTalk**
C823121
- ❑ Two 3.5-inch disks:
 - EPSON Print! Network Package Disk
 - Communications Toolbox Package Disk

If any of the package contents are missing or damaged, contact your Epson dealer.

Do you have what you need?

You can use EPSON Print! on most Macintosh computers. However, before you install EPSON Print!, check that you have the necessary equipment and that your system is properly configured to use the drivers, as described in the following sections.

Supported printers

EPSON Print! for LocalTalk supports Epson's new ESC /P 2 advanced dot-matrix control language on the following printers:

Driver	Supported Printers
ESC/P 2 Net	LQ-570, LQ-870, LQ-1070, LQ-1170 Action Printers 5000,5500

Macintosh computer models

EPSON Print! operates on the following Macintosh computers:

Macintosh [®] Plus	Macintosh [®] SE
Macintosh Classic [®]	Macintosh [®] SE/30
Macintosh [®] LC	Macintosh [®] II
Macintosh [®] IIX	Macintosh [®] IIXc
Macintosh [®] IIsi	Macintosh [®] IIsi
Macintosh [®] IIfx	Macintosh [®] Portable
Macintosh Classic [®] II	Macintosh [®] Quadra" Series
Powerbook [™] Series	

If you have questions about whether other Macintosh systems are compatible with the Epson printers listed above, please call your Epson dealer.

System configuration

Your Macintosh computer must have the following minimum system configuration to use EPSON Print!:

Memory requirements	System 6. x: 1 MB RAM System 7.x: More than 2 MB RAM
Operating System	System 6.x (6.0.5 or later) or System 7.0
Storage	hard disk*

*EPSON PPrint! drivers must be installed on your Macintosh computer's hard disk, but require very little storage space, so any size hard disk is supported.

LocalTalk interface and printer cable requirements

You can connect your Macintosh to your printer using an AppleTalk connector kit or a LocalTalk compatible connector and cable. You need one connector kit for each Macintosh and one connector kit for each printer.

For more information about cable requirements, consult your Macintosh documentation or the documentation provided with the LocalTalk connector and cable.

Chapter 2

Installing the Interface Card for LocalTalk

Contents

What is AppleTalk?	8
Preparing to install the interface card	8
Installing the interface card	9

The Interface Card for LocalTalk allows Macintosh-family computers to use an Epson printer through a LocalTalk connection. Once the interface card is installed in the printer and the appropriate driver is installed on the computer, the printer becomes a standard LocalTalk device that does not require special command sequences to print documents. The Interface Card for LocalTalk is a simple “plug and go” card, significantly reducing installation time and expense.

The Interface Card for LocalTalk offers the following features:

- ❑ Easy installation
- ❑ No DIP switches to set
- ❑ An additional Macintosh-compatible serial port, compatible with most serial devices. In the future, this port will support network expansion.

What is AppleTalk?

AppleTalk is the local area network protocol developed by Apple Computer, Inc., as a standard for Macintosh computer communication. LocalTalk provides the physical link between devices and computers. LocalTalk hardware is built into every Macintosh and requires the appropriate twisted pair cabling. The AppleTalk network system was designed as a seamless extension of the Macintosh, allowing easy access to remote resources and interaction with other users through personal computers.

Preparing to install the interface card

The Interface Card for LocalTalk is designed for easy installation inside the printer. Installing or removing the interface card is simple; you’ll need only a Phillips screwdriver and your printer manual.

The following sections give you detailed information on how to install the interface card in your Epson printer. If you have trouble with your printer, and you suspect the interface card is the problem, perform the self-test procedures described in Appendix B.

Caution

Turn off the power to the printer and the computer before you install the interface card. Make sure the power cord for your printer is unplugged.

Avoid touching the printer circuits or circuit board contacts, since many of these components are sensitive to static electric charges that may build up on your body.

Installing the interface card

These procedures describe installing the Interface Card for LocalTalk so that you can print Macintosh documents using your Epson printer.

1. Use a Phillips screwdriver to remove the screws securing the shield plate on your printer; then Lift off the plate.

You'll want to keep the plate in a safe place so that you can replace it if you remove the interface card later.

2. Fit both sides of the interface card into the guides inside the compartment.
3. Insert the card into the slot, guiding it straight in. Push the card in firmly, but carefully; you should feel it fit into place.

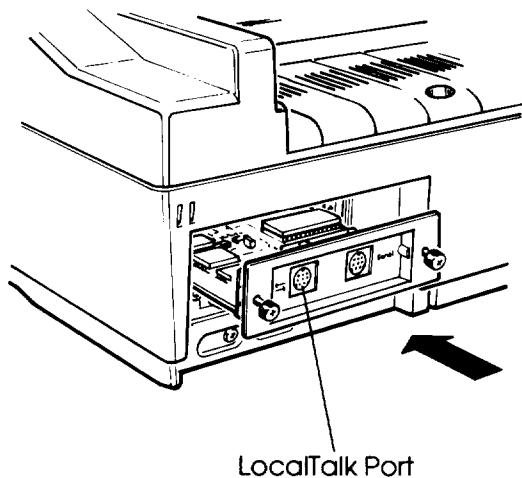


Figure 2-1
Inserting the interface card

4. Secure the card with the two screws.
5. Attach your AppleTalk connector to the LocalTalk port on the interface card. The LocalTalk port displays two opposing arrows. Do not use the other connection, which is a serial port for future expansion.

You are now ready to install your EPSON *Print!* drivers.

Chapter 3

Installing EPSON Print!

Contents

Installing EPSON <i>Print!</i> with System 7.x	12
Copying the EPSON <i>Print!</i> driver to your hard disk	12
Copying the EpsonNamer to your hard disk	13
Installing EPSON <i>Print!</i> with System 6.x	14
Installing the Communications Toolbox	14
Copying EpsonTool to the Communications folder	15
Copying EPSON <i>Print!</i> to your System folder	15
Copying the EpsonNamer to your hard disk	16
Assigning and selecting a LocalTalk printer	17
Activating AppleTalk	17
Using the EpsonNamer to name your printer	18
Selecting a LocalTalk printer with the Chooser	21

Once you have installed the Interface Card for LocalTalk on your Epson printer, you *can* install the EPSON *Print!* driver your Macintosh needs to communicate with the printer.

You'll need the following EPSON *Print!* disks to install your EPSON *Print!* drivers.

- ❑ EPSON *Print!* Network Package Disk
- ❑ **Communications Toolbox** Package Disk*

*Used only for Macintosh computers running System 6.x.

Important

Be sure to copy your EPSON *Print!* disks and store the originals in a safe place. Use your copies to install your EPSON *Print!* drivers.

Refer to your Macintosh documentation for information on copying disks.

Since the procedures for installing EPSON *Print!* on a Macintosh running System 7.x are different from those for System 6.x, this section first describes installing EPSON *Print!* with System 7.x, then with System 6.x.

Installing EPSON *Print!* with System 7.x

These procedures describe how to install the EPSON *Print!* drivers on a Macintosh running System 7.x. They cover installing the EPSON *Print!* drivers, including the Epson Tool, and copying the EpsonNamer to your Macintosh computer's hard disk.

Copying the EPSON *Print!* driver to your hard disk

Follow these steps to install EPSON *Print!* in the Extensions **folder** located **in the System folder** on your hard disk.

Important

Before you install EPSON Print! on your hard disk, make sure the Interface Card for LocalTalk has been installed in your printer and your computer and printer are connected through LocalTalk.

1. Start your Macintosh using your hard disk as the **startup disk**.
2. Open the System folder.
3. Open the Extensions folder located inside the System folder.
4. Insert *the EPSON Print! Network Package* disk.
5. If your computer does not automatically display the contents of *the EPSON Print! Network Package* disk, **double click** on the disk **icon**.
6. Locate the Epson ESC/P2 Net driver.
7. **Drag** the driver icon to the Extensions folder.
8. Also drag the **Epson** Tool icon to the Extensions folder.

Copying the Epson Namer to your hard disk

Follow the steps below to install the **EpsonNamer** on the hard disk. These procedures assume you have copied the EPSON Print! driver and Epson Tool as described above.

1. With the contents of *the EPSON Print! Network Package* disk still displayed, close the Extensions folder.
2. Close the System folder.
3. Drag the EpsonNamer icon to any folder on your hard disk.
4. Close the EPSON *Print! Network Package* disk window, eject the disk, and store it in a safe place.

You are now ready to assign and select a LocalTalk printer.

Installing EPSON Print! with System 6.x

These procedures describe how to install the EPSON *Print!* drivers on a Macintosh running System 6.x. They describe installing the Communications Toolbox, copying the Epson Tool, installing the EPSON *Print!* drivers, and copying the EpsonNamer to your Macintosh computer's hard disk.

Installing the Communications Toolbox

Follow these steps to install the Communications Toolbox:

1. If your Macintosh is running, choose Shutdown from the Special menu on your Macintosh computer's **menu bar**.
2. Insert the Communications Toolbox disk.
3. Start your Macintosh, using the Communications Toolbox disk as your startup disk.

If your system ejects the Communications Toolbox disk, insert the disk again.

4. If your computer doesn't automatically display the contents of the disk, double click on the disk icon.
5. Double click the Installer icon.

The Installer program displays its welcome screen.

6. **Click** on OK. The Easy Install dialog box appears.
7. Click on Install.

The installer program then installs the Communications folder on your hard disk. When installation is complete, a message reports that the installation was successful.

8. Click Quit.

9. Close the disk window, eject the disk, and store it in a safe place.
10. Select Restart in the Special menu.

Copying Epson Tool to the Communications folder

After you install the Communications folder, you must follow the steps below to copy the Epson Tool icon to the Communications folder.

1. Open the System folder on your hard disk drive.
2. Insert the EPSON *Print!* Network Package disk.
3. If your computer doesn't automatically display the contents of the EPSON *Print!* Network Package disk, double click on the disk icon.
4. Drag the Epson Tool icon to the Communications folder, located in the System folder on your hard disk drive (the Communications folder does not have to be open).
5. Close the disk window and eject the disk.
6. Select Restart in the Special menu.

Copying EPSON Print! to your System folder

Follow the steps below to copy the EPSON *Print!* driver into the System folder on your hard disk.

Important

Before you install EPSON Print! on your hard disk, make sure the Interface Card for LocalTalk has been installed in your printer and your computer and printer are connected through LocalTalk.

1. Start your Macintosh using your hard disk as the startup disk.
2. Open the System folder.
3. Insert the EPSON *Print!* Network Package disk.
4. If your computer does not automatically display the contents of the EPSON *Print!* Network Package disk, double click on the disk icon.
5. Locate the Epson ESC/P2 Net **printer driver**.
6. **Drag** the driver icon to the System folder.

Copying the EpsonNamer to your hard disk

Follow the steps below to install the **EpsonNamer** on the hard disk. These procedures assume you have copied the EPSON *Print!* drivers as described above.

1. With the contents of the EPSON *Print!* Network Package disk displayed, close the System folder.
2. Drag the EpsonNamer icon to any folder on your hard disk.
3. Close the EPSON *Print!* Network Package disk window, eject the disk, and store it in a safe place.

When you have copied the EPSON *Print!* drivers to your hard disk, turn to the section in this chapter on assigning and selecting a LocalTalk printer.

Assigning and selecting a LocalTalk printer

Before you can use a printer on a LocalTalk network, you must:

- ❑ Use the **Chooser** to activate Appletalk
- ❑ Use EpsonNamer to give your Epson printer a name, and assign it to the correct driver
- ❑ Select the printer using the Chooser.

The following sections give detailed instructions on these procedures.

Important

Before you assign your Epson printer as a LocalTalk printer, make sure the Interface Card for LocalTalk has been installed in your printer and your computer and printer are both connected through LocalTalk. Also, make sure both the printer and your Macintosh are turned on.

Activating AppleTalk

The following procedures ensure that AppleTalk is active for your Macintosh. They assume you started your system from the hard disk containing the Epson Tool and drivers.

1. Pull down the **Apple menu** in the menu bar at the top of your Macintosh screen and select the Chooser.
2. Click on the Active radio button to activate AppleTalk.

AppleTalk must be active before your Macintosh can acknowledge your printer.

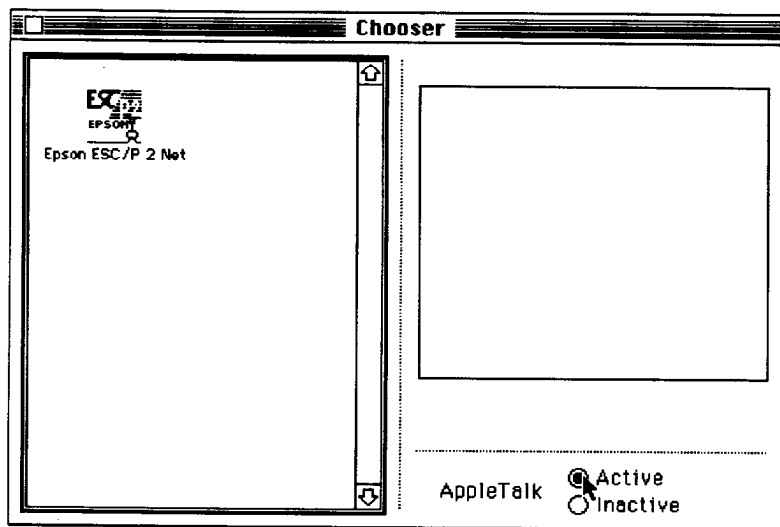


Figure 3-1
Activating AppleTalk

3. Close the Chooser.

Using the EpsonNamer to name your printer

You must now use the EpsonNamer to assign your printer as a LocalTalk device.

1. Display the contents of your hard disk.
2. Double click on the EpsonNamer icon (you should have previously copied it to a folder on your hard disk).

The following dialog box appears. Epson is the default name for the Interface Card for LocalTalk installed in a dot-matrix printer.

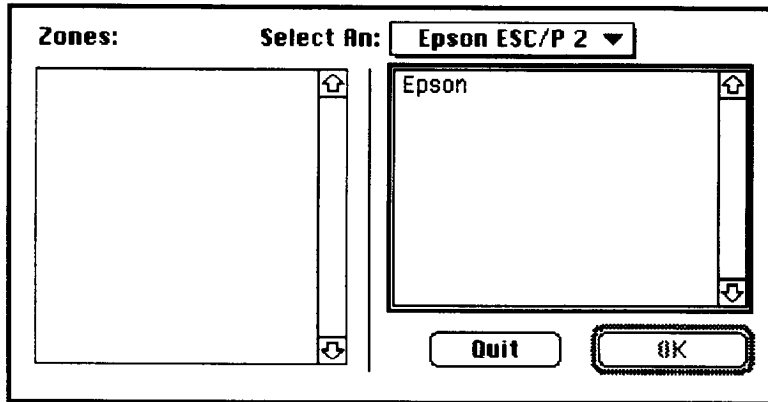


Figure 3-2
Initial EpsonNamer dialog box

Important

If you connected more than one Epson dot-matrix printer to the LocalTalk network, the name Epson appears several times. You can use Test or Identify in the next dialog box to identify each Epson printer.

3. If your network contains more than one **zone**, select the zone that includes the printer or printers you plan to assign.
4. Make sure your desired driver is displayed next to Select An: at the top right of the box.

If the correct driver isn't displayed, **use the pull down menu** to select the correct driver.

5. Double click on the name Epson in the right-hand box. The following dialog box then appears:

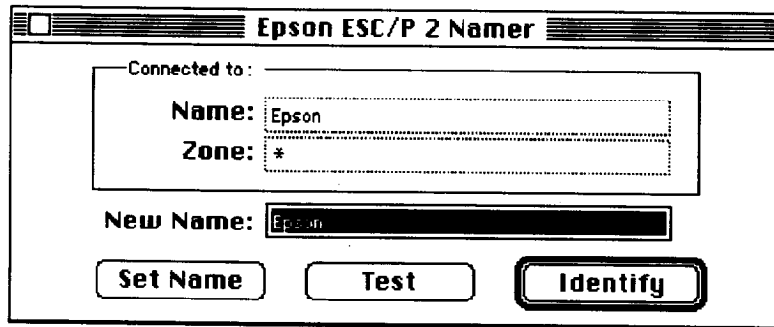


Figure 3-3
EpsonNamer name assignment box

6. If you connected more than one Epson printer to your LocalTalk network, and you are not sure which printer you are naming, click on Identify. The printer you are naming then beeps. You can also click on Test; the printer you are naming then prints a short self test.
7. Move the **mouse cursor** to the New Name box and type the name you wish to assign to this printer. (This example uses the model name LQ-570.)

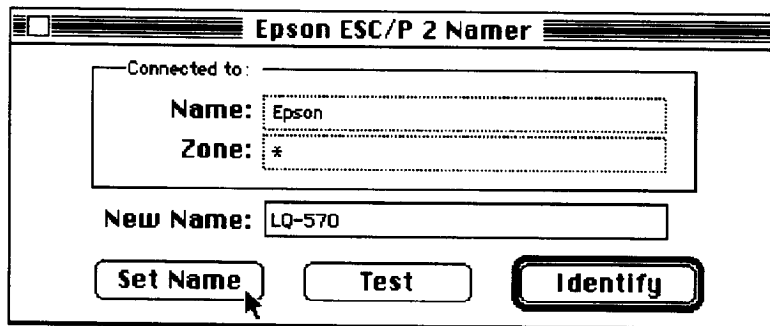


Figure 3-4
New name example

8. Click on Set Name to assign the new name to your printer.

9. Check that the new name you entered displays next to Name in the center box, then close this dialog box.
10. Check that the printer you named appears below the Select An: pull down menu:

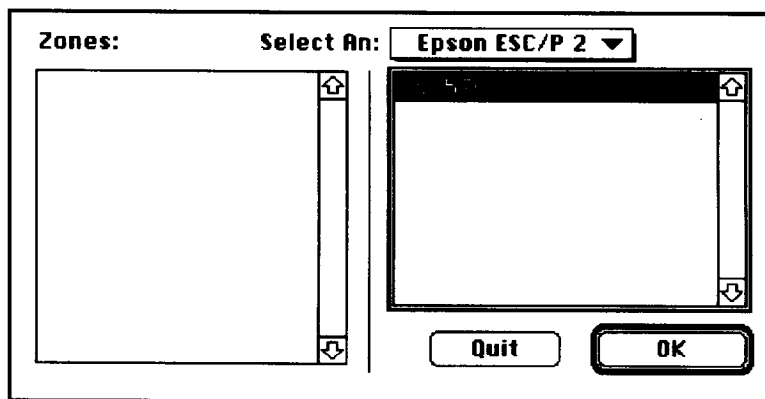


Figure 3-5
Renamed Epson printer

If the printer name does not display, you have assigned the wrong printer. Double click on the name of the printer you mistakenly assigned. After the dialog box appears, pull down the Commands menu in the menu bar and select Reset To Factory Settings. Then exit that dialog box and return to step 3.

11. If you have connected more than one printer, repeat steps 3 to 10 to assign a unique name to each printer.
12. Click on Quit to exit the EpsonNamer.

Selecting a LocalTalk printer with the Chooser

The following procedures describe using the Chooser to select the printer you have just named.

1. Select the Chooser from the Apple menu. A screen similar to the following screen appears:

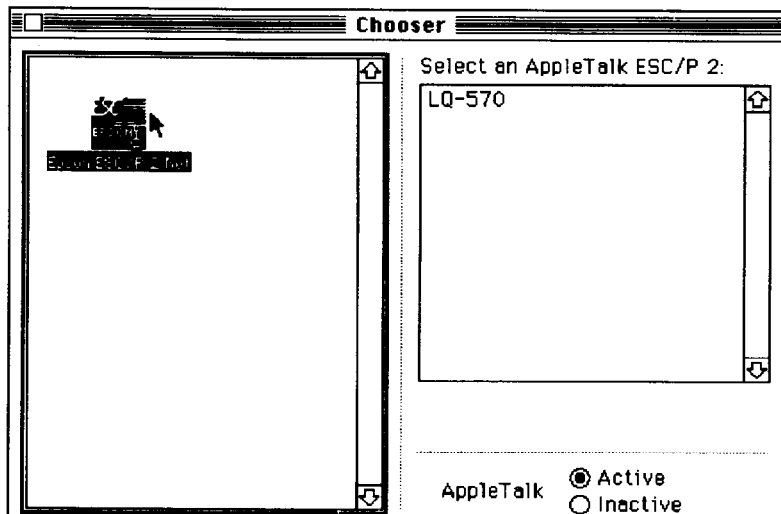


Figure 3-6
Selecting the EPSON Print! driver from the Chooser

2. Click on your desired AppleTalk driver. The names of the printers assigned to that driver appear to the right.

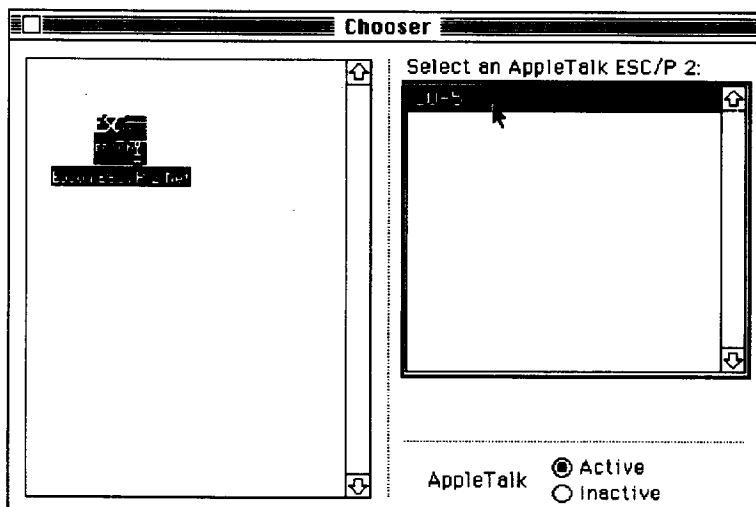


Figure 3-7
LQ-570 printer selected with the Chooser

Important

If your desired printer driver icon is not displayed, check the following:

You may have numerous printer drivers in your System folder, and not all can be displayed in the dialog box at once. Use the scroll bar to display other printer driver icons,

You may have too many printer drivers to be displayed, even if you use the scroll bar. If so, remove any unused printer drivers from your System folder,

Your desired printer driver may not yet be copied to your System folder. Re-install the driver according to the instructions at the beginning of this chapter.

3. Click on the name of the printer you wish to select.
4. Then close the Chooser.

Your desired printer is now selected.

Chapter 4

Using EPSON Print!

Contents

Selecting page layouts	26
Using the paper option	27
Paper sizes	27
Using the reduce or enlarge option	28
Choosing orientation	28
Assigning printer effects	28
Font substitution	28
No gaps between pages	29
Selecting options	29
Using custom paper sizes	30
Creating custom paper sizes	30
Deleting custom paper sizes	31
Printing with EPSON Print!	31
Selecting the print mode	32
Using the Draft print mode effectively	33
Selecting the head scan direction	35
Choosing the number of copies	35
Selecting pages to print	35
Using the cover page option	36
Selecting paper bins	36
Paper feed	37
Paper bin options	38

Once you have installed EPSON *Print!*, you can select page layout settings and print **documents** from your **application software**.

Selecting page layouts

Before creating or printing a document for the first time with an application program, or when you select a different printer using the Chooser, always check the settings in the Page Setup dialog box.

Enter the dialog box by selecting Page Setup in the **File menu** located on the menu bar.

The Page Setup dialog box for the Epson ESC/P2 Net driver appears below:

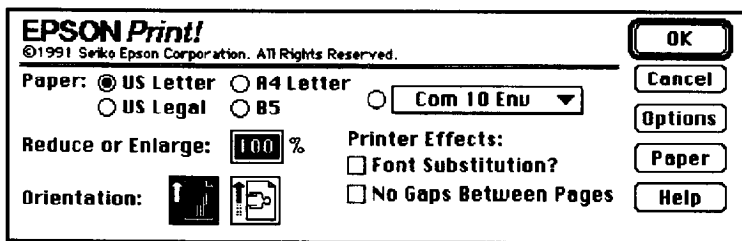


Figure 4-1
Epson ESC/P2 Net page setup dialog box

Important

The dialog box you see may have some additional buttons or check boxes across the bottom. Some applications add further selection capabilities to the EPSON *Print!* dialog box.

The following sections describe the settings you can make from Page Setup.

Using the paper option

You can select the paper size in one of three ways:

- ❑ Click the radio button for one of the four displayed paper sizes
- ❑ Select one of the additional sizes listed in the pull down menu to the right of the four standard sizes
- ❑ Create a custom size by clicking the Paper button at the far right of the dialog box. See the section in this chapter on Custom paper sizes for a description of defining custom paper sizes.

Paper sizes

Standard paper sizes include:

Epson ESC/P 2 Net	Measurements (width x height)	
	millimeters	inches
A3	297 x 420	11.67 x 16.53
A4 Letter	210 x 297	8.25 x 11.67
A4 Letter wide	297 x 210	11.67 x 8.25
B Ledger	279 x 432	11 x 17
B5	182 x 257	6.93 x 9.84
Comp Paper	356 x 305	14.83 x 11
Executive	184 x 267	7.25 x 10.5
International Fanfold	210 x 297	8.25 x 12
International Comp	356 x 305	14.83 x 12
US Legal	216 x 356	8.5 x 14
US Letter	216 x 279	8.5 x 11
US Letter wide	279 x 216	11 x 8.5
C5 Envelope	162 x 229	6.38 x 9
COM 10 Envelope	105 x 241	4.13 x 9.5
DL Envelope	110 x 220	4.33 x 8.67
Monarch Envelope	96 x 191	3.87 x 7.5

Using the reduce or enlarge option

You can reduce or enlarge the printout of your document between 25% and 400% (100% is normal size) by typing the percent value in the Reduce or Enlarge option box.

Choosing orientation

You can select either portrait or landscape printing by selecting one of these icons:



Portrait



Landscape

Portrait prints in the normal orientation, while landscape prints with the document rotated 90°.

If you change the orientation, your application program reformats text and graphics to fit correctly into the new layout. You should, however, always select the correct orientation before you create a document.

Assigning printer effects

Two options allow you to assign printer effects specifically designed to take advantage of your printer's features.

Font substitution

Select Font Substitution if you want a document created with the Macintosh New York, Geneva, or Monaco fonts to be printed with the following printer fonts:

Standard	Substitution
----------	--------------

New York	Times®
Geneva	Helvetica®
Monaco	Courier

No gaps between pages

Select this option to eliminate the space added at the end and beginning of each page when you use continuous paper. The printer prints over the perforation between pages.

Do not select this option if you are using single-sheet paper.

Selecting options

Selecting the Options button on the Page Setup dialog box produces the following dialog box:

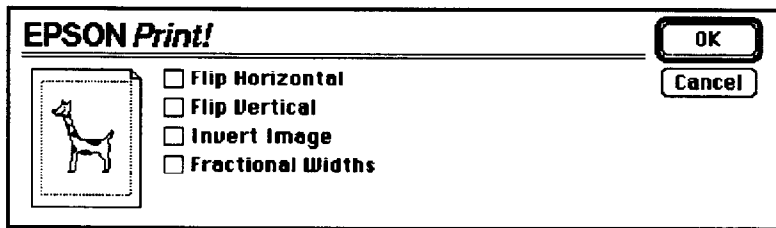


Figure 4-2
Options dialog box

Clicking on these options results in the following:

- | | |
|-----------------|--|
| Flip Horizontal | Prints a mirror-image of the document, with the left and right reversed. |
| Flip Vertical | Prints a mirror-image of the document, with the top and bottom reversed. |

Invert Image	Reverses the color of your document: white prints as black and black prints as white.
Fractional Widths	Improves character placement by using smaller spacing increments. Some application programs do not support this feature.

Using custom paper sizes

Your Page Setup dialog box includes a Paper button below the Options button. By clicking Paper, you can create your own custom paper size.

Creating custom paper sizes

Once you are in the Paper dialog box, perform the following steps to create a paper size:

1. Click on Paper Name.
2. Type in a name for your new paper size.
3. Click on New.

The paper name is transferred to the Paper Sizes box. If you highlight an existing custom paper name and click on New, the paper sizes for the selected paper name are copied for the new paper.

4. Click on the Width or Height boxes and enter the width or height of your new paper size (make sure to select inches or centimeters as necessary).
5. Click on Margins if you wish to make margin settings. The dialog box then expands to show the margin settings.

6. Change margin settings by typing the new settings in each of the four margins boxes (top and bottom margin settings are ignored if No Gaps between Pages is selected in the Print dialog box).
7. Click on OK.

The new paper size is displayed along with the other paper sizes in the pull down menu to the right of Paper in the Page Setup dialog box. Select your custom size just as you would select any other additional paper size.

Deleting custom paper sizes

You can delete a custom paper size by following these steps:

1. Enter the Page Setup dialog box.
2. Click on Paper.
3. Click on the paper size you wish to delete.
4. Click on Delete.
5. Click on OK to delete the paper size and exit the dialog box. (Click on Cancel instead if you decide not to delete the paper size .)

Printing with EPSON Print!

Once you have selected an EPSON Print! driver in the Chooser, the EPSON Print! dialog box appears when you click on Print in the File menu. The dialog box allows you to set the print quality, the pages to print, and the paper source.

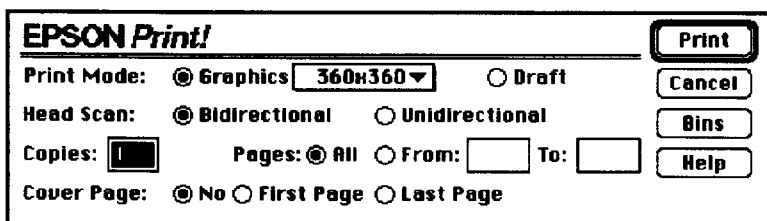


Figure 4-3
EPSON Print! dialog box

Important

The dialog box you see may have some additional buttons or check boxes across the bottom. Some applications add further selection capabilities to the EPSON Print! dialog box.

Selecting the print mode

The Print Mode option allows you to select a graphics printing mode or a draft mode.

In the graphics printing modes (180 x 180, 360 x 180, and 360 x 360 dpi), the entire document, including the text, is converted to a graphic image and is printed as a **graphic**.

In the draft mode, the printer substitutes its internal fonts for the selected fonts and prints no graphics. As a consequence, the draft mode prints the document very quickly.

Graphics

Sets the horizontal and vertical **resolution** for graphics printing in dots per inch (dpi). Using the pull down menu, you can select from 180 x 180, 360 x 180, and 360 x 360 dpi. The 360 x 360 setting provides the highest quality printout, but the slowest printing speed.

Draft Prints only the text part of the document (no graphics), using the printer's built-in fonts.

The text size and position may not be exactly the same as the on-screen text, since the driver uses the printer's fonts only.

Important

The Draft print mode is unavailable if you have selected the following options: Landscape orientation, Reduction, Flip vertical, Flip horizontal, or Invert image.

Using the Draft print mode effectively

Converting documents to graphics and printing them is a slow process, so EPSON Print! provides a Draft print mode to allow you to take advantage of some of your printer's speed capabilities.

The Draft print mode gives the fastest printout of the text in a document while approximating the layout of the document as closely as possible.

In the Draft print mode, the graphic elements of the document are not printed, and text is printed using the printer's resident fonts rather than the selected Macintosh fonts. These printer fonts print very quickly, but can only approximate the final layout of your document. The Draft print mode is useful for reviewing the text in your document before you print the final copy using the Graphics print mode.

You can also use the Draft print mode to print specialized documents, such as forms or spreadsheets, where fast printing, and not a beautiful graphic layout, is the final goal. In this case you will want the text to print so that the columns and text align properly.

To ensure proper text alignment for these documents, the font you select on your Macintosh must match the spacing of the printer's resident fonts. A fixed-pitch typewriter style font, like Courier,

rather than proportional fonts, like Helvetica or Times, provides the best results.

Also, you'll want to select your font size carefully to ensure accurate output. The following table lists Macintosh font sizes and their equivalent printed output in the Draft print mode.

Macintosh Font	Printed Output	
	Horizontal Spacing (per inch)	Vertical Spacing (per inch)
Courier 10 point	12 characters	6.5 lines
Courier 12 point	10 characters	6 lines
Courier 20 point	6 characters	3.58 lines

Once you have selected the Draft print mode in EPSON Print!, you can select a draft or letter quality font from the printer's control panel. The very fastest output available to you is the printer's draft font. The letter quality fonts, such as Courier, Roman, or Sans Serif, give better print quality at a slightly slower speed.

Important

To maintain the fastest possible printing speed when the Draft print mode is selected, the printer's resident multi-point fonts print only at a single point size (10.5) rather than using the full range of font sizes (8 to 30 points).

Selecting the head scan direction

This option allows you to determine the direction in which the print head prints.

- | | |
|----------------|---|
| Bidirectional | The print head prints in both directions. Printing is faster, but vertical lines and graphics may not align well. |
| Unidirectional | The print head prints in one direction only. Printing is slower, but vertical lines and graphics align better. |

Choosing the number of copies

Click on the Copies box and type in the number of copies you wish to print of each page.

Selecting pages to print

You can print all or just some pages of your document.

If you do not select All, you must indicate the individual page you wish to print or the first and last pages of the section you wish to print. Click on the From box and type in the page number of the first page you wish to print; click on the To box and type in the last page you wish to print. EPSON Print! then prints the pages in sequence.

Using the cover page option

You can have EPSON Print! automatically print a simple cover **page**, showing the document information below:

EPSON Print!

Epson ESC /P 2 Net version X.X
Document: XXXXXXXX
Application: XXXXXXXX
User: XXXXXX
Date: DDD, MMM DD, YYYY, HH:MM AM

Important

Some application programs do not support the cover page feature, and may not print information as displayed above.

The cover page options produce the following results:


- | | |
|------------|---|
| No | Prints no cover page. |
| First Page | Generates a cover page and prints it as the first page of the printout. |
| Last Page | Generates a cover page and prints it as the last page of the printout. |

Selecting paper bins

By clicking on the Bins button, you can select the paper source for your printout. You can even specify a separate source for the first page of your printout.

The Bins button allows you to select either manual feed or the first or second bin of an optional cut-sheet feeder.

When you click the Bins option, the following dialog box appears.

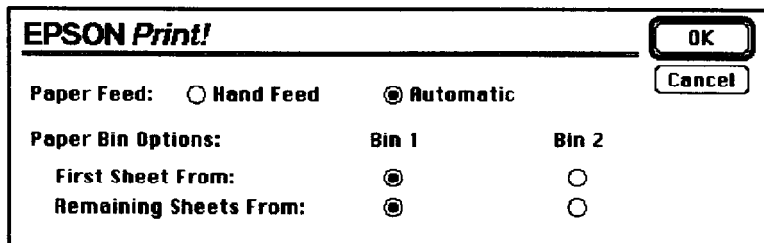The image shows a dialog box titled "EPSON Print!". It has a title bar with "OK" and "Cancel" buttons. The main content area has a "Paper Feed:" label with two radio buttons: "Hand Feed" (unselected) and "Automatic" (selected). Below this is a "Paper Bin Options:" label. To the right of this label are two columns of radio buttons labeled "Bin 1" and "Bin 2". Under "Bin 1", there are two radio buttons: "First Sheet From:" (selected) and "Remaining Sheets From:" (selected). Under "Bin 2", there are two unselected radio buttons for the same labels.

EPSON <i>Print!</i>		OK	Cancel
Paper Feed:	<input type="radio"/> Hand Feed <input checked="" type="radio"/> Automatic		
Paper Bin Options:	Bin 1	Bin 2	
First Sheet From:	<input checked="" type="radio"/>	<input type="radio"/>	
Remaining Sheets From:	<input checked="" type="radio"/>	<input type="radio"/>	

Figure 4-4
Bins option dialog box

The settings you can make in this dialog box are described below.

Paper feed

The Paper Feed options allow you to select manual or automatic paper feeding.

Hand Feed

Selecting this setting tells the application program to wait for single-sheet paper to be manually fed into the printer.

If you select this option, the driver prompts you between sheets to insert the next page and click OK. The radio buttons in the Paper Bin options do not display.

Automatic

Selecting this setting tells the driver to automatically load single-sheet paper from the cut-sheet feeder bins installed in your printer.

If you select this option, the driver does not prompt you to insert paper and the radio buttons in the Paper Bin options display.

Use this setting also when you print on continuous paper.

Important

If you are using the Hand Feed option or the Automatic paper feed option with a cut-sheet feeder, make sure you have not selected the No gaps between pages option in the Page Setup dialog box.

Paper bin options

First Sheet From	Tells the driver to automatically load the first sheet of your printout from Bin 1 or 2.
Remaining Sheets From	Tells the driver to automatically load all sheets following the first sheet of your printout from Bin 1 or 2.

Important

The drivers ignore these settings if you are using continuous paper.

If you select Cover page printing, the cover page always prints from Bin 1; the cover page is not considered the first sheet.

Click on OK to print your document using the selected setting.
Click on Cancel if you decide to change any settings.

Chapter 5

Troubleshooting

Contents

EPSON Print! driver problems	40
AppleTalk network problems	42
Insufficient memory problems	43
Application program problems	44

EPSON *Print!* provides you powerful printer control in an easy-to-use format.

If printer operation or printed results are not what you expect, please check the suggestions in this chapter first. If problems persist, see your Epson dealer.

This chapter is divided into driver, AppleTalk network, insufficient memory, and application software problems. Problems are listed first, followed by a list of possible causes and solutions.

EPSON Print! driver problems

- **The printer does not print at all, or does not print as expected.**

The LocalTalk cable between your Macintosh and printer may not be properly connected. Reconnect and try again.

If you are using a Macintosh Plus or Powerbook, the batteries may be installed incorrectly, or may be weak. Reinstall or recharge the batteries as necessary.

The printer may be set to "PAUSE."

AppleTalk may be set to "Inactive" in the Chooser.

The wrong printer driver may be selected in the Chooser.

You may have selected the wrong printer driver for your LocalTalk printer. Check the driver and reinstall the correct one, if necessary.

- **Character spacing is uniformly too narrow or too wide.**

Your software may not work correctly with either the standard or substituted fonts. Turn the font substitution setting off or on as necessary in the Page Setup dialog box.

The character spacing adjustment setting in your software may be set to off. Change the setting to on.

- **Error ID=-108, ID=04, or ID=25 (Insufficient RAM error) appears on the screen of your computer.**

You may not have enough memory installed in your computer. Delete any unused Init. files, fonts, devices, or accessories from the RAM cache in your computer's control panel.

You may be using MultiFinder® with your applications. Use the standard **Finder™** instead to reduce memory usage (System 6.x only).

An application may require large amounts of memory within MultiFinder. Use Get Info (located in the File menu of Finder) to increase application program memory in 100-Kbyte increments (System 6.x only).

If you have not yet saved your document, your computer may not have enough free RAM to process the print data. Click on OK in the error message dialog box and save your document; this may free up sufficient memory for printing the document.

- **You cannot print when Graphics is selected; printing only occurs when you select Draft in the Print dialog box.**

An application may require large amounts of memory within MultiFinder. Use Get Info (located in the File menu of Finder) to increase application program memory in 100-Kbyte increments (System 6.x only).

- **The following message appears: "Sorry, Epson (driver name) cannot be used."**

Your EPSON Print! driver software has become corrupted. Reinstall the driver according to the instructions in Chapter 3.

- **Columns of numbers don't line up as expected when in Draft print mode.**

You may have selected a proportionally spaced font. Select a fixed pitch font, such as Courier, for your text. See Chapter 4, "Using the Draft print mode effectively" for the best font sizes to select.

AppleTalk network problems

- **EpsonNamer does not run.**

The Epson LocalTalk (Net) printer driver may not be installed. Install the driver according to the instructions in Chapter 3.

Epson Tool may not be installed properly. Reinstall Epson Tool according to the instructions in Chapter 3.

The Communication folder may not be installed properly (if you are using System 6.x). Reinstall the Communication folder according to the instructions in Chapter 3. (Installing the Communication folder is not required for System 7.x.)

- **No printer is listed in the EpsonNamer.**

AppleTalk may not be active. Enter the Chooser and set AppleTalk to Active before running the EpsonNamer.

The printer may not be connected properly to your computer. Make sure the cables and LocalTalk connection boxes are connected properly.

The printer may not be turned on. Turn on the printer.

- **No printer is listed under Select an AppleTalk... in Chooser.**

AppleTalk may not be set to Active. Set AppleTalk to active in the Chooser.

The printer may not be connected properly to your computer. Make sure the AppleTalk Kit and 8-pin miniDIN (LocalTalk Connection Box) are connected properly.

You may not have assigned a name with the EpsonNamer prior to opening the Chooser. Use the EpsonNamer to assign a name according to the instructions in Chapter 3.

The correct printer driver may not be installed. Make sure you select the Epson ESC/P2 Net printer driver.

The printer may not be turned on. Turn on the printer.

You may have assigned a name to your ESC/P2 printer (using the EpsonNamer) while the wrong printer driver was selected in the Select An: box in the EpsonNamer. If this occurs, your Macintosh computer sends incorrect printing codes to your printer. Use the EpsonNamer to select Reset to Factory Settings in the Commands menu. Then rename your ESC /P2 printer, making sure the Epson ESC/P2 Net driver is displayed next to Select An in the EpsonNamer dialog box. See details on using the EpsonNamer in Chapter 3.

Insufficient memory problems

If the Finder or System File memory size is larger than the computer's memory, or if you are using a RAM disk or large RAM cache, insufficient memory problems can occur. Your computer may let you know about memory shortages before you print, or it may display nothing until you attempt to print.

If you are having unexplained problems, check first to see if you have sufficient memory. After saving your documents and exiting any applications, try the following:

- ❑ Consider installing additional memory if you are using applications that require large amounts of memory, or are attempting to print complicated files. See your Macintosh documentation for details

- ❑ Save your documents often
- ❑ Delete any unnecessary fonts from your System folder
- ❑ Delete any unnecessary drivers or utilities from your System folder
- ❑ Return the Reduce or Enlarge setting to 100% to eliminate any reduction or enlargement of the printout
- ❑ Instead of printing an entire document at once, try printing a few pages at a time.

Application program problems

If you have printing problems with one application only, try the following:

- ❑ Check to see if you have selected the incorrect driver or printer port in your application program. Be sure to select the EPSON Print! driver
- ❑ Your application program may not use standard Macintosh printing procedures. If so, you cannot use EPSON Print! with this application.

Appendix A

LocalTalk port specifications

Compliance	Phase 1 and phase 2
Baud rate	230.4 kbps
Topology	Parallel bus, low-resistance transformer; isolated, floating ground
Signaling standard	EIA standard RS-422, balanced voltage
Network signal rates	Speed independent. Speeds in excess of 1 Mbps
Signal encoding	FM0 (bi-phase) space
Frame format	SDLC (Synchronous Data Link Control)
Maximum number of nodes per network	Limited by traffic
Node identification	AppleTalk logical address is self-configuring; no user action required
Cabling	AppleTalk 8-pin miniDIN

Appendix B

Interface Card for LocalTalk self test

If you're having trouble with your printer, you may want to perform a self test on the Interface Card for LocalTalk. This self test ensures that your interface is working properly in your printer.

To perform a self test for the Interface Card for LocalTalk, you will need to perform these steps, which are described fully in this Appendix:

- ❑ remove the interface card from your printer
- ❑ change the self-test jumper setting on the interface
- ❑ reinstall the interface in your printer
- ❑ perform the self test
- ❑ remove the interface from the printer
- ❑ change the jumper setting back to its original position and reinstall the interface card.

Important

The self-test printing function is not available for Epson Page printers in POSTSCRIPT® mode. In these printers, always leave the self-test jumper in its original position (OFF).

Removing the interface card from the printer

You'll need to remove the interface card from the printer to change the self-test jumper setting. Follow these steps:

Caution

Turn off the power to the printer and the computer before you remove the interface card. Make sure that the power cord for your printer is unplugged.

Avoid touching the printer circuits or circuit board contacts, since many of these components are sensitive to static electric charge that may build up on your body.

1. Using a Phillips screwdriver, unscrew the two screws securing the interface card (see Chapter 2 for a diagram).
2. Gently pull the card out of the compartment.

Changing the self-test jumper setting

The Interface Card for LocalTalk has three jumpers, one of which is used for selecting the self-test function.

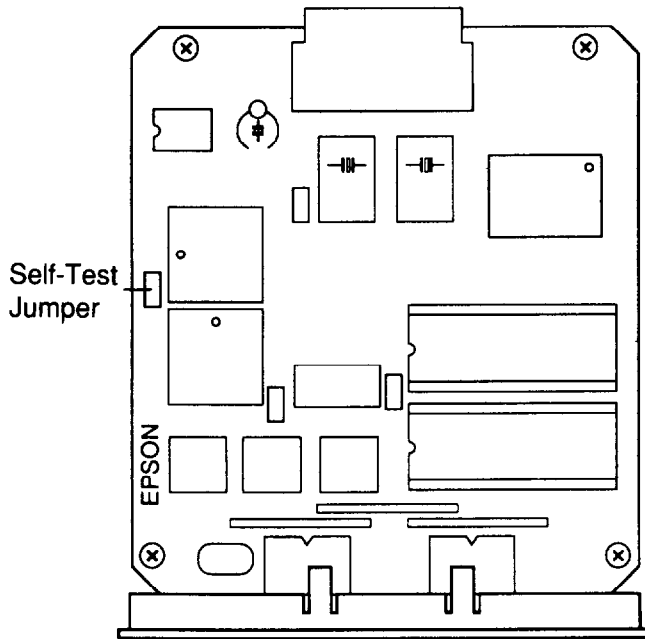


Figure B- 1
Identifying the self-test jumper

A jumper is a small electrical connector that controls one of the printer's functions. The jumper settings for your interface card are preset at the factory for normal printer operation.

The self-test jumper is OFF (the factory setting) when the jumper plug covers only one pin. It is ON (self-test mode) when the plug covers both pins. To perform the self test, you need to change the setting on this jumper from OFF to ON.

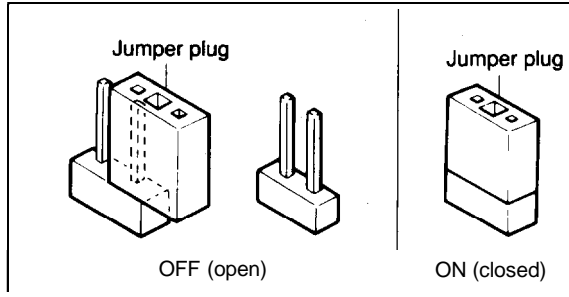


Figure B-2
Setting the jumpers ON or OFF

1. With your fingers, carefully pull the jumper off the single pin holding it and gently place it over both pins.
2. Push it down until it is seated firmly in place.

Caution

Be careful not to bend the jumper pins or damage any surrounding components on the interface card.

You are now ready to install the interface card in your printer to perform the self test.

Installing the interface card for the self test

This section tells you how to install your interface card back into your printer so that you can perform the self test.

1. Fit both sides of the interface card into the guides inside the compartment.
2. Insert the card into the slot, guiding it straight in. Push the card in firmly but carefully; you should feel it fit into place.

3. Secure the card with the two screws.

Printing a self test

Perform the following steps to print a self test:

1. Plug the printer's power cord into an electrical outlet.
2. Turn the printer on.

The printer prints the self-test characters (80 per line) until you turn the printer off again.

3. To stop self-test printing, turn the printer power off.

Returning the jumper to its original position

Once the self test is complete, you'll need to remove the interface card and return the jumper to the OFF position. Follow these steps:

1. Unplug the printer's power cord.
2. Remove the two screws holding the interface card in place.
3. Gently slide the interface card out of the compartment.
4. Gently remove the jumper from both pins and reinsert it over a single pin.
5. Reinstall the interface card in your printer.

Glossary

Apple menu: The menu that appears when you hold down the mouse button while the mouse cursor is located on the Apple icon at the left of the menu bar.

AppleTalk: The network protocol used on LocalTalk networks.

Application software/program: A program used for a specific purpose such as word processing, or creating graphics and spreadsheets.

Bin: A check box allowing you to select the sheet feeder paper bins you want to feed paper from.

Button: A visual device resembling a push button, in a dialog box. You click on a button to perform an action.

Check box: A selection box which allows you to indicate the option you want by clicking the mouse on the box. When the box is selected, a check or an X appears in the box.

Chooser: A desk accessory that allows you to select from the drivers contained on your operating disk.

Click: Pressing the mouse button quickly, once.

Close: Returning to the previous window or box by selecting the Close command, or by clicking on the small square at the top left corner of the current window.

Communications Toolbox: An Apple software program required for using EPSON Print! for LocalTalk with System 6.x. This program is built into System 7.x, so installation is not necessary for System 7.0 and later.

Cover page: A cover page printed for each document indicating the EPSON Print! driver selected, the document title, the application used to produce the document, the user, and the date.

Cursor: The small line or box that appears when you are typing text to indicate the next character position.

Desk top: The display shown on the Macintosh computer's screen.

Dialog box: A box on the screen used to make settings or display messages.

Document: A file you create with your application program.

Double click Pressing the mouse button quickly, twice.

Draft: A print mode in which only the text part of a file is printed using the fonts available on the printer.

Drag: Moving an object or displaying an option by placing the mouse cursor on the object, pressing and holding down the mouse button, and releasing the button when the desired position or setting is reached.

Driver. *See Printer driver.*

ESC/P 2: A new series of Epson printers that use the Epson Standard Code for Printers, Level 2.

EpsonNamer: A program used to assign names and drivers to Epson printers connected to a LocalTalk network through the Interface Card for LocalTalk. This is similar to the Namer program Apple includes with LaserWriter printers.

Epson Tool: A software program used by EPSON *Print!* drivers to communicate with an AppleTalk network.

File menu: The menu displayed when you hold the mouse button down on File in the menu bar.

Finder: The application that controls the Macintosh desktop, operates desktop programs, controls application programs and documents, and handles desktop messages.

Folder: An icon displayed on the desktop that contains documents, application programs and other files.

Head scan: An option that allows you to determine the printing direction of the print head on a dot-matrix printer.

Icon: A small picture on the screen representing a file.

Interface Card for LocalTalk: The interface card installed in the printer to connect it to a LocalTalk network.

LocalTalk A type of network hardware used to connect Apple computers, peripherals, and related devices.

Menu bar: The long bar at the top of the display showing menu names.

Mouse cursor: The small arrow mark on the screen that the mouse uses as a pointer.

Namer: *See EpsonNamer.*

Port: A connector located at the back of the computer used for sending signals to peripheral equipment.

Printer driver: A program that organizes and controls the data sent between the computer and printer.

Pull down menu: A menu containing options that are available when you hold the mouse button down on the menu bar. You select an option by pulling the mouse over the desired option and releasing the mouse button.

Radio button: A round selection button that contains a smaller, solid circle when selected.

RAM (random access memory): Temporary memory where most document manipulation occurs. Data in RAM is lost when you turn off your computer.

Raster graphics: Documents are converted to raster graphics when you print them in the Graphics print mode.

Resolution: The number of dots per inch displayed on the monitor or printed by the printer. The higher the number, the better the image appears.

Screen font: Fonts displayed on the computer's screen.

Scroll: A function that allows you to move around in a window box in order to see more information.

Startup disk: The disk containing the System folder necessary to operate your Macintosh.

System file: One of the files necessary to run your computer.

System folder: A special folder that contains all the necessary system files.

WYSIWYG (what you see is what you get): A feature that ensures that what you see on the screen closely approximates what is printed on the page.

Zone: A logical grouping of devices in a LocalTalk network that makes it easier for users to locate network services.

Index

A

alignment	
text in columns	33
alignment of text	33
AppleTalk	
activating	17
connector kit	5
definition	8
application	
definition	53
problems	44
software	26

B

banner page	36
See cover page	
baud rate	45
bidirectional head scan	35
bin	
definition	53
explanation	36
option screen	37
options	38
paper	36
button	viii, 53

C

cable	
requirements	5, 45
caution	
static electric charges	9, 48
character placement	30
check box	viii, 53
Chooser	
definition	53
problems	42
selecting printer from	21
click	53
Close	53

columns	
text alignment	33
Communications Toolbox	
definition	53
installing	14
when required	12
copies	35
cover page	36
definition	53
from bin 1	38
information not printing	36
no	36
print as first page	36
print as last page	36
cursor	54
custom paper sizes	27
customer support	viii

D

dialog box	
definition	54
disks	
copying and storing	12
double click	
definition	54
draft print mode	33
definition	54
drag	54
driver icon	
copying	13, 16
not displayed	23

E

enlarge image	28
Epson Namer	
assignment box	20
definition	54
installing	13, 16
problems	42
reset to factory settings	21
EPSON Print!	
dialog box	32
disks	12
features	2
installing drivers	12, 15

Epson Tool		Interface Card for LocalTalk	
definition	54	definition	55
installing	13, 15	description	8
ESC/P2		installation requirements	8
definition	54	jumper settings	48
		self test	9, 47
F		invert image	30
file menu	54	J	
finder	54	jumper	49
flip		L	
horizontal	29	landscape	28
vertical	29	load paper	
folder	55	automatically	37
font		by hand	37
courier	33	local area network	8
draft printer	34	LocalTalk	
fixed pitch	33	cable requirements	45
fixed pitch comparisons	34	definition	8, 55
letter quality	34	interface card	8
point size	34	M	
printer	29, 33	Macintosh	
screen	56	supported models	4
standard	29	system configurations	5
substitution	28	memory	
fractional widths	30	problems	43
		requirements	5
G		menu bar	55
gaps	29	mirror image	29
graphics		multiple copies	35
not printing	33	N	
H		number of copies	35
head scan		O	
definition	55	operating systems	5
direction	35	orientation	28
horizontal flip	29		
I			
icon	55		
image			
flip horizontal	29		
flip vertical	29		
invert	30		
reduce or enlarge size	28		

P

page	
cover	36
layouts	26, 27, 29
orientation	28
setup	26
paper	
automatic feed	37
bins	36
custom sizes	30
hand feed	37
source	31
paper sizes	
custom	27
selecting	27
standard	27
paper tray	
See bin	
port	55
portrait	28
print	
quality	31
selected pages	31, 35
print head	
direction	35
print mode	32
draft	33
graphics	32, 55
problems	41
printer	
assigning a name to	18
driver	55
effects	28
fonts	32
incorrect assignment	21
selecting with Chooser	21
printer drivers	
description	2
printers supported	4
printing	
document as graphic	32
forms and spreadsheets	33
over the perforation	29
pull down menu	55

R

radio button	viii, 55
--------------	----------

RAM

definition	55
problems	41, 43
requirements	5
reduce image	28
reset to factory settings	21
resident fonts	
See printer fonts	
resolution	56

S

scroll	56
self test	
Interface Card	47
jumper	49
printer	20
specifications	
for LocalTalk port	45
startup disk	56
static electric charges	
caution	9, 48
support from Epson	viii
supported	
computers	4
printers	4
system folder	
definition	56

T

text alignment	33
----------------	----

U

unidirectional	35
----------------	----

V

vertical flip	29
---------------	----

Z

zone	
definition	56